 
 
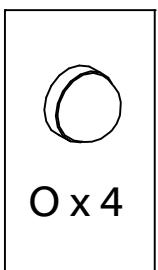 
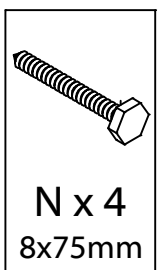 
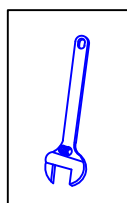 
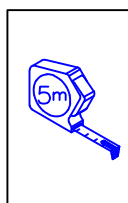 
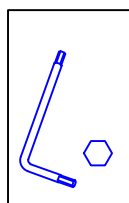 
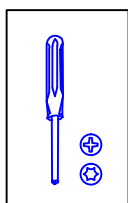 
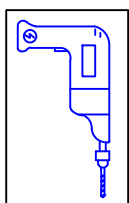 
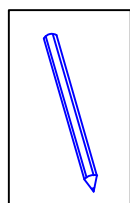 
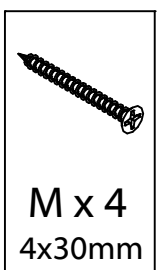 
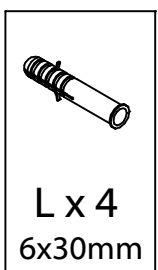 
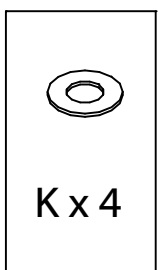 
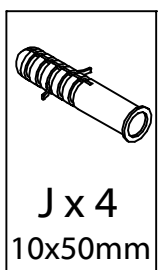 
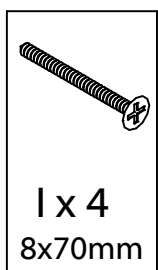 
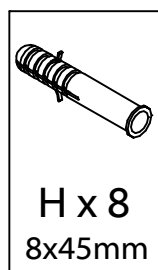 
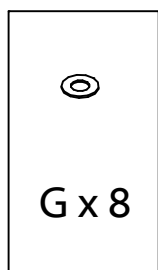 
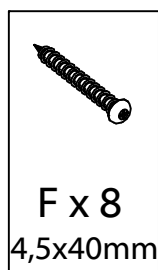 
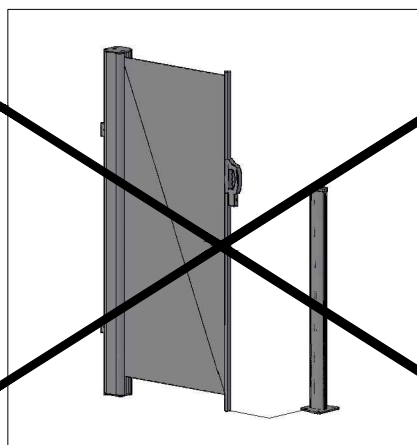 
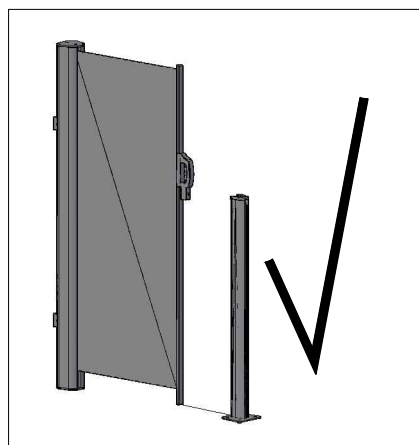 
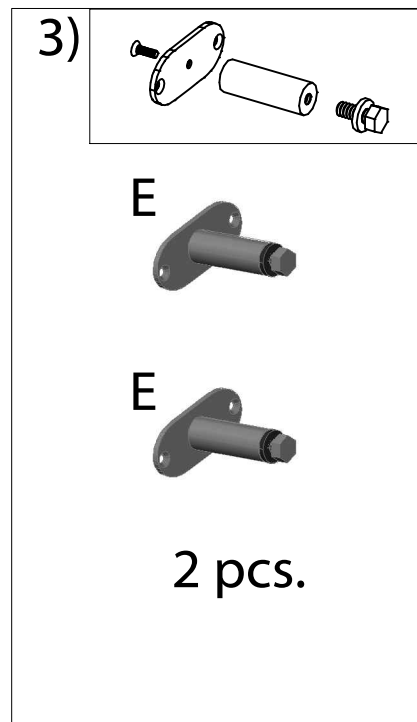 
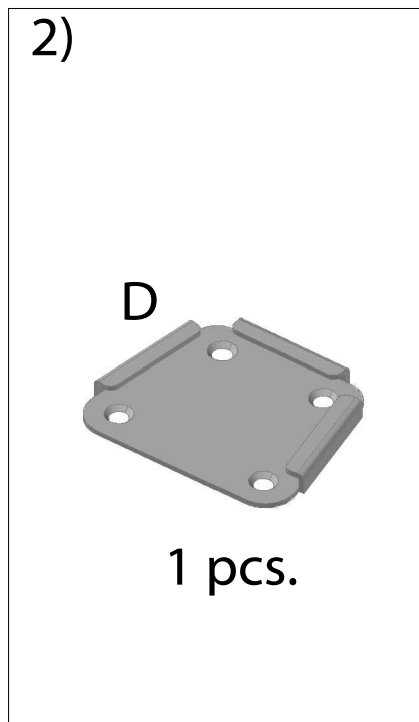 
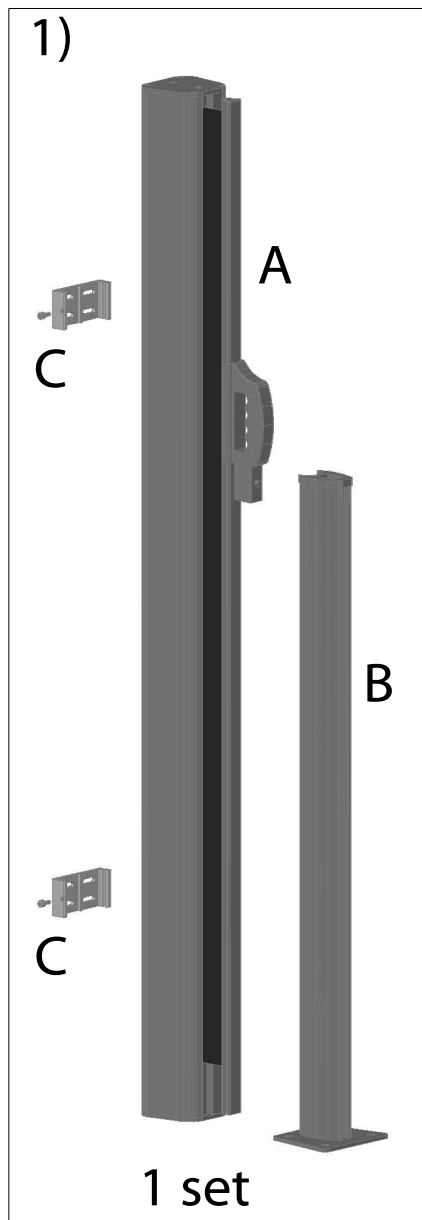 
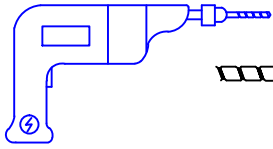 
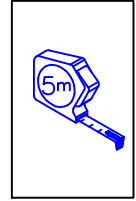 
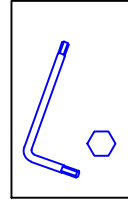 
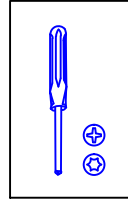 



16520-1
16521-1
16525-1

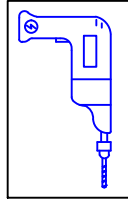

1)

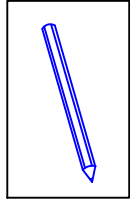

 8 mm

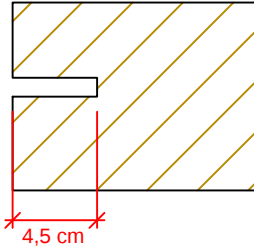


4,5 cm





F x 8




G x 8

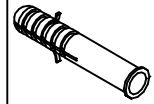















H x 8

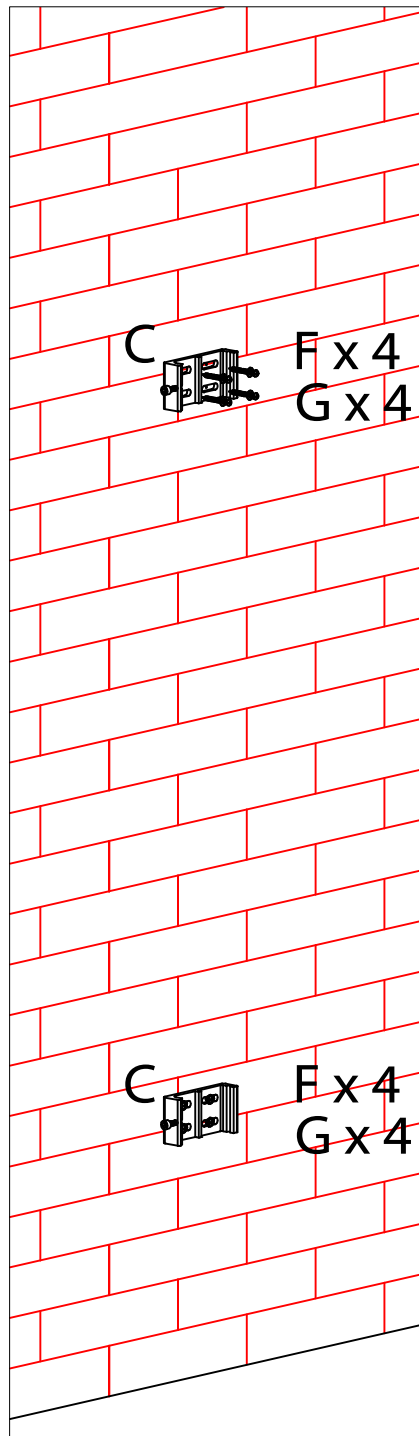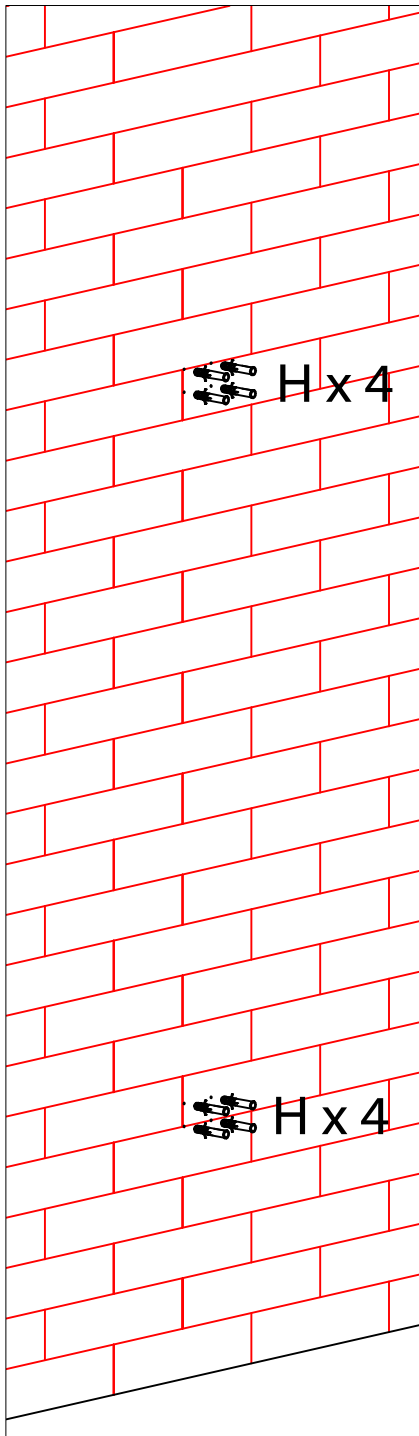




side 2

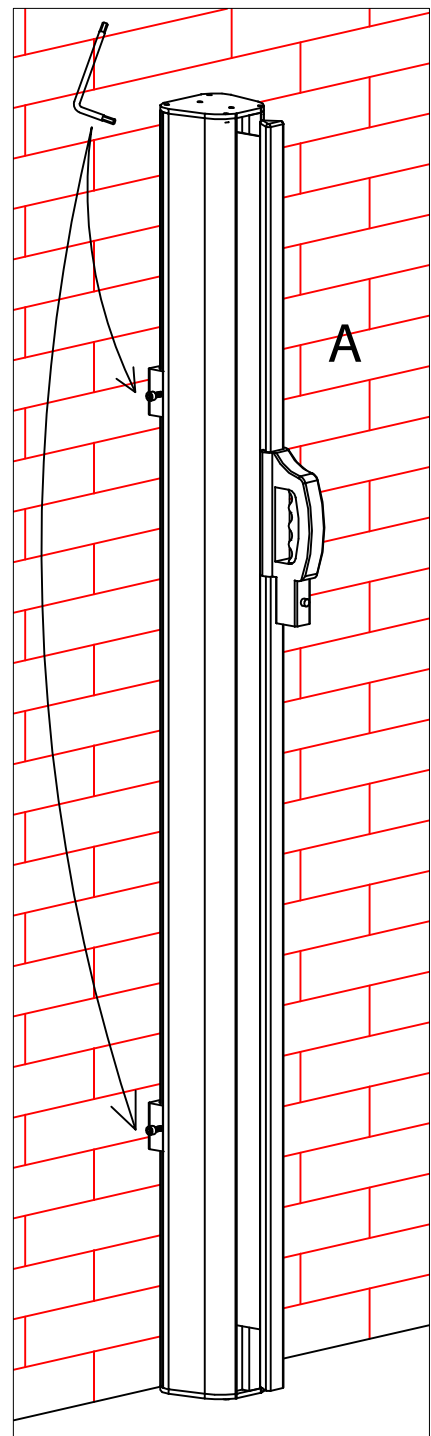

1)

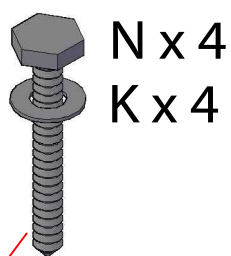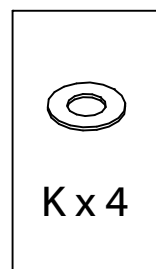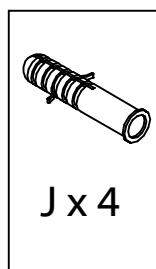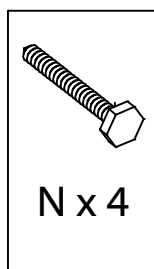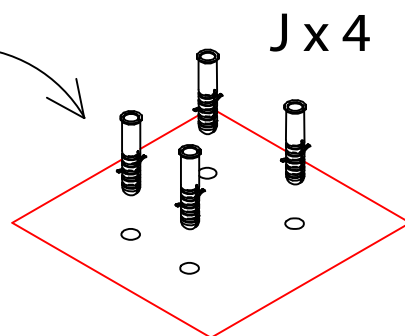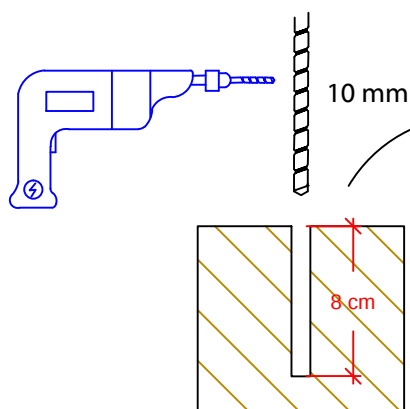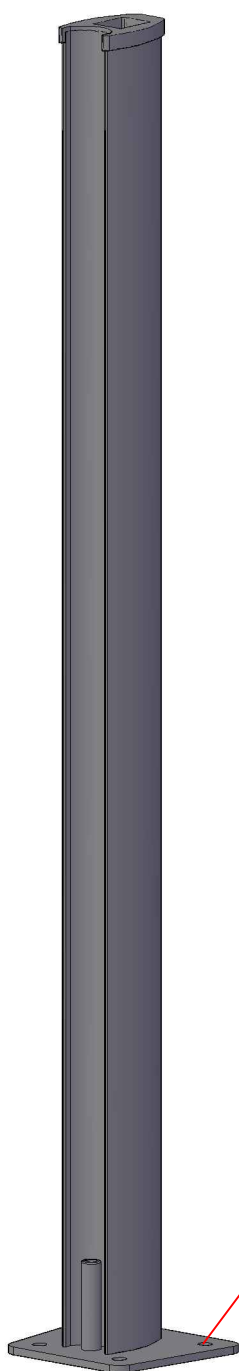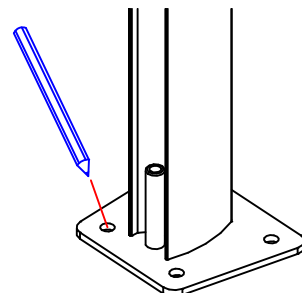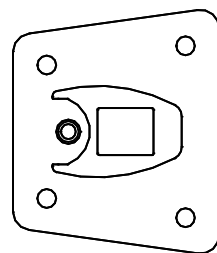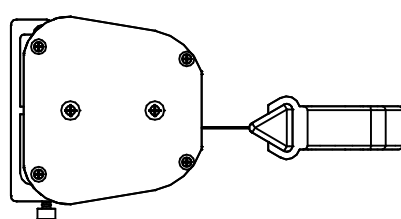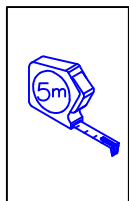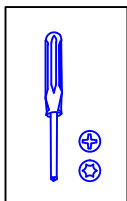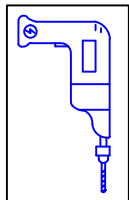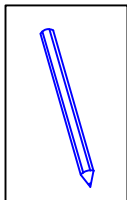

1)

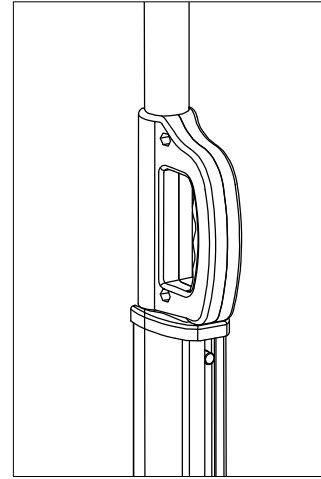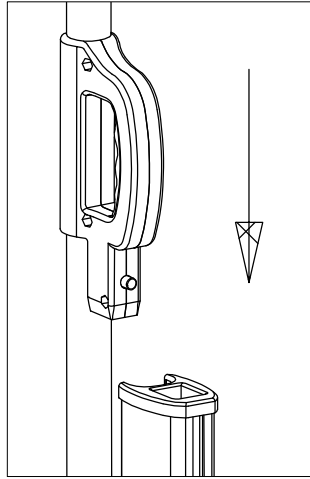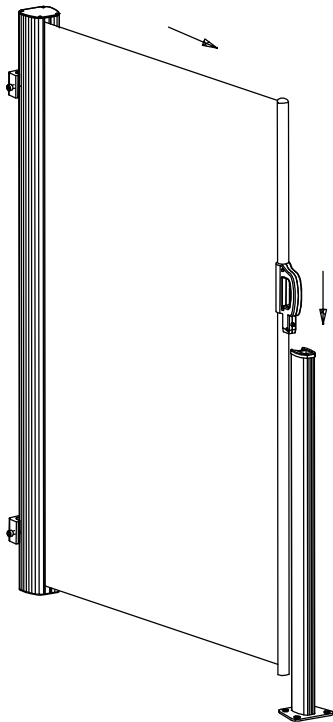

Korrekt brug!

Markisedugen skal holdes lodret når den trækkes ud/rulles tilbage. Tryk på håndtaget, den nederste del af håndtaget sættes ned i stolpen - se billede ovenfor. Røret som afslutter markisen skal i bunden passe ned i tappen på stolpen.

NB! Træk lidt ud i markisedugen for at aktivere fjederen for tilbagerulning.

Korrekte Anwendung!

Die Markise soll senkrecht bis an den Pfosten herausgezogen werden. Den Handgriff von oben in den Pfosten einführen - siehe Bild oben. Bitte beachten, dass die Markise auch unten am Pfosten einrastet.

Nach Gebrauch den Handgriff drücken und die Markise aus dem Pfosten lösen und senkrecht in die Kassette zurückrollen.

NB! Die Markise etwas weiter herausziehen um die Federwirkung zu aktivieren.

Correct use!

The side-awning must be kept vertical when taken out of/ withdrawn to the wall-cassette.


Press the handgrip, and lift it slightly at the same time.

The foot of the handgrip is put down onto the post.







- notice the drawing above.

The tube which concludes the side-awning must fit the bottom-pin, on the post.






NB! Pull the side-awning a little bit towards you to activate the feather for withdrawing.

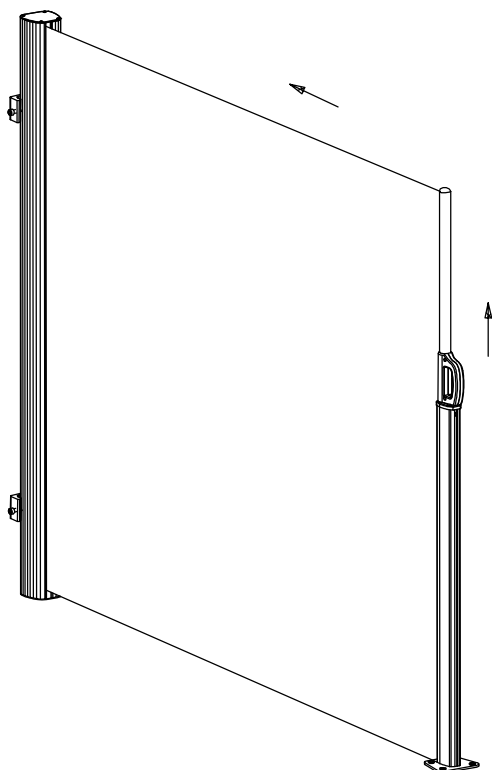



2)

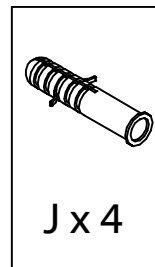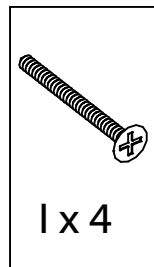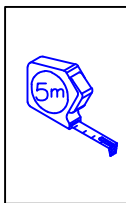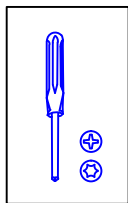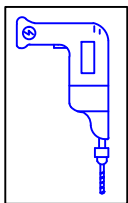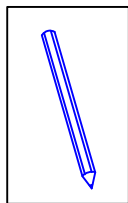











D

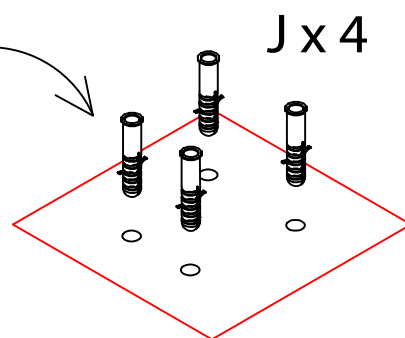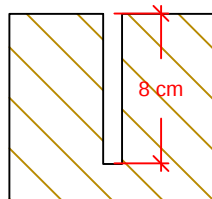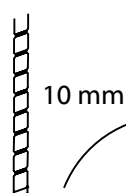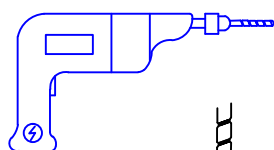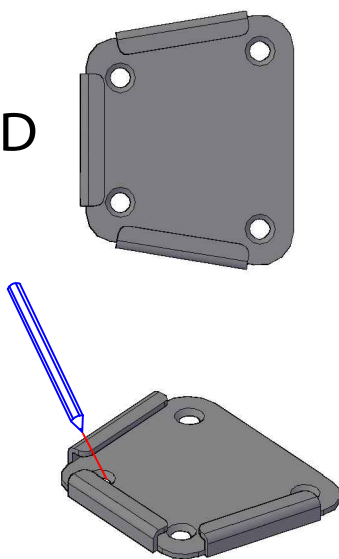






I x 4

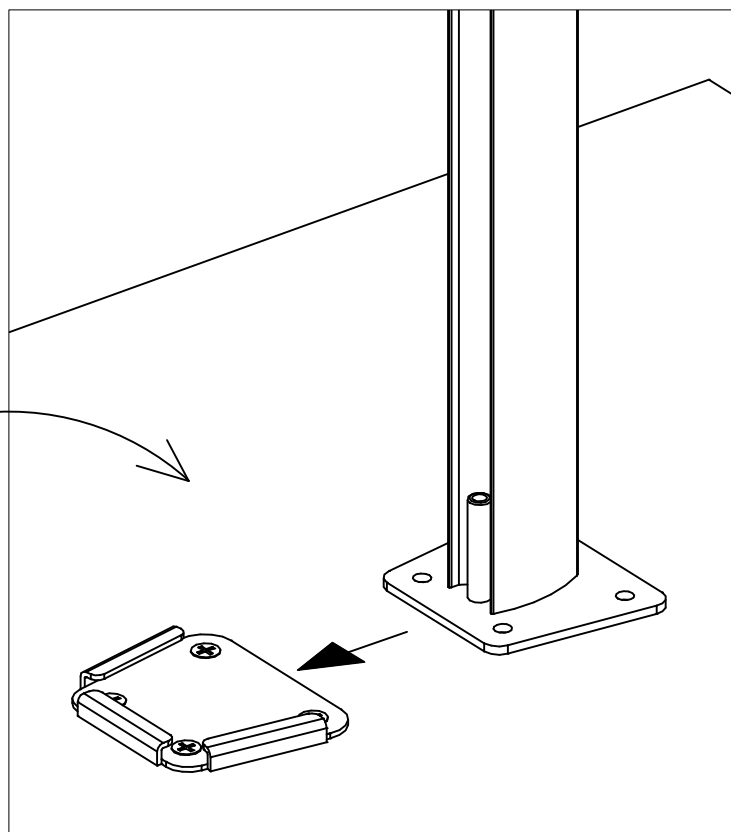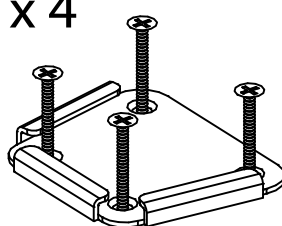  

          3)

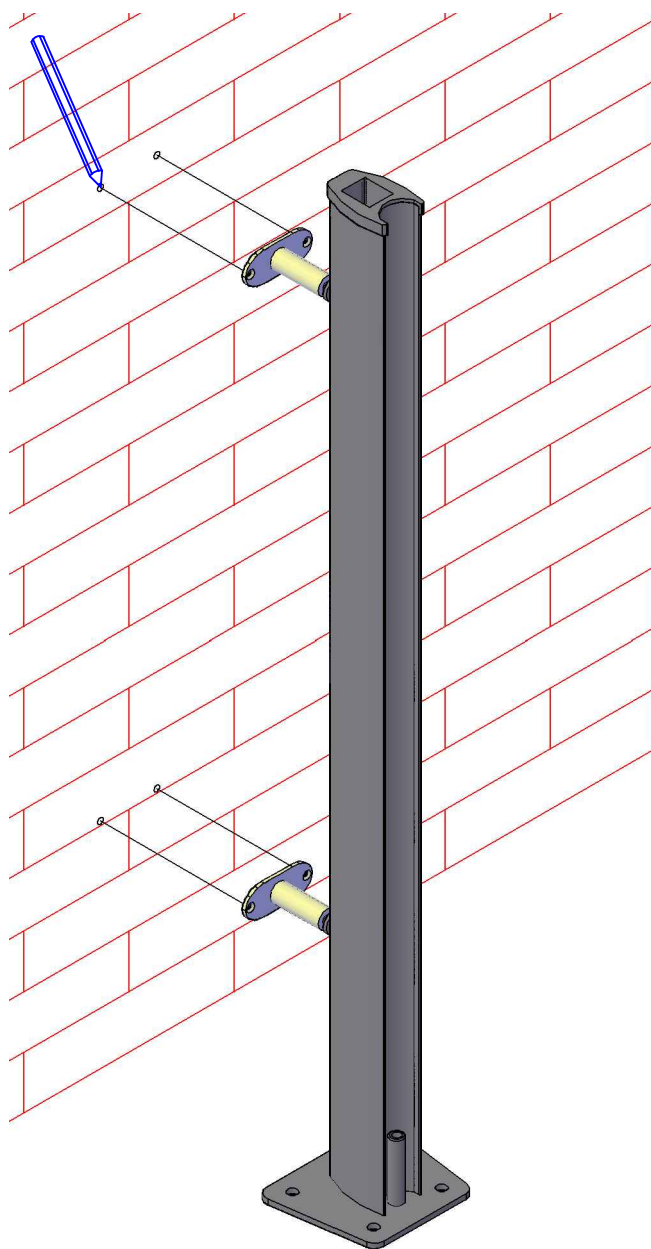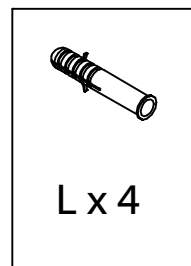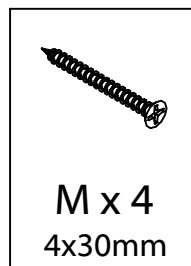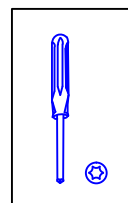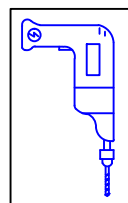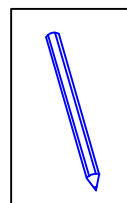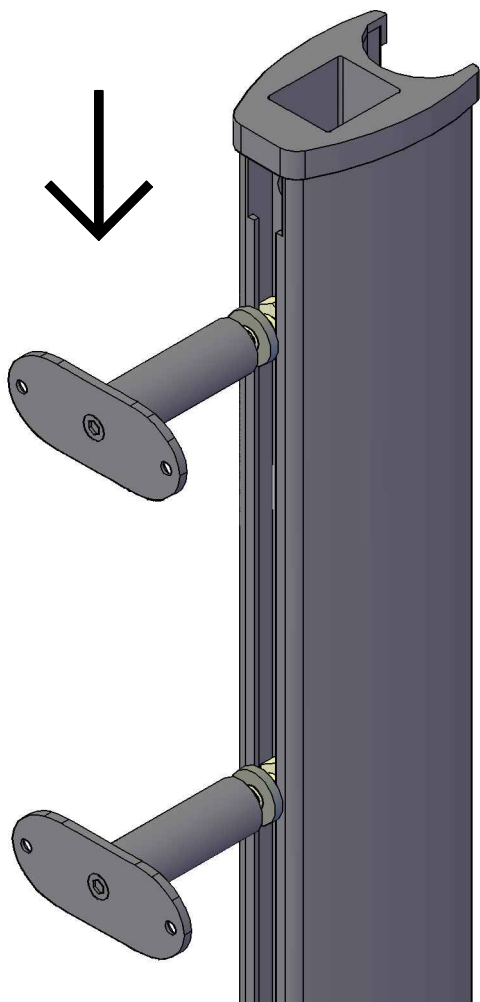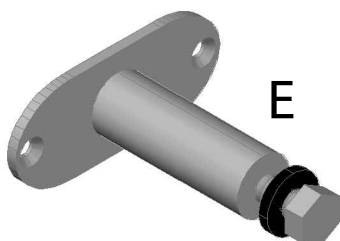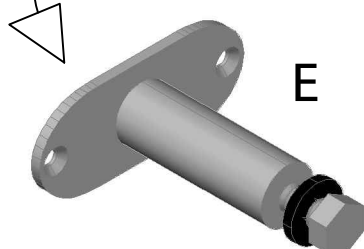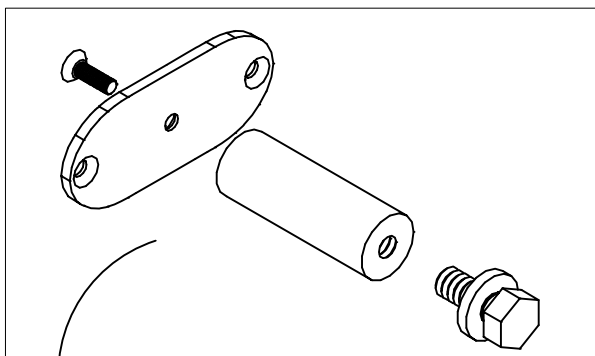

     3)

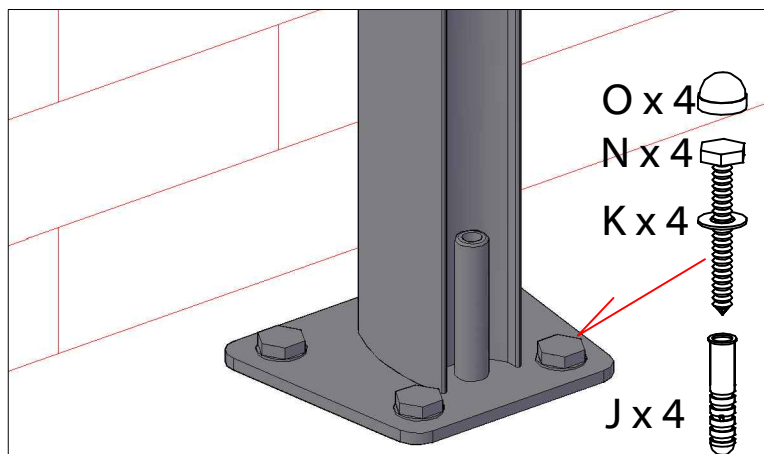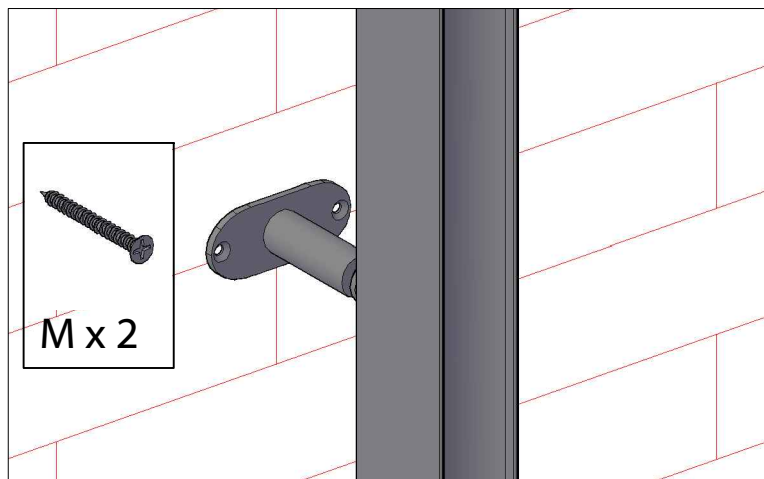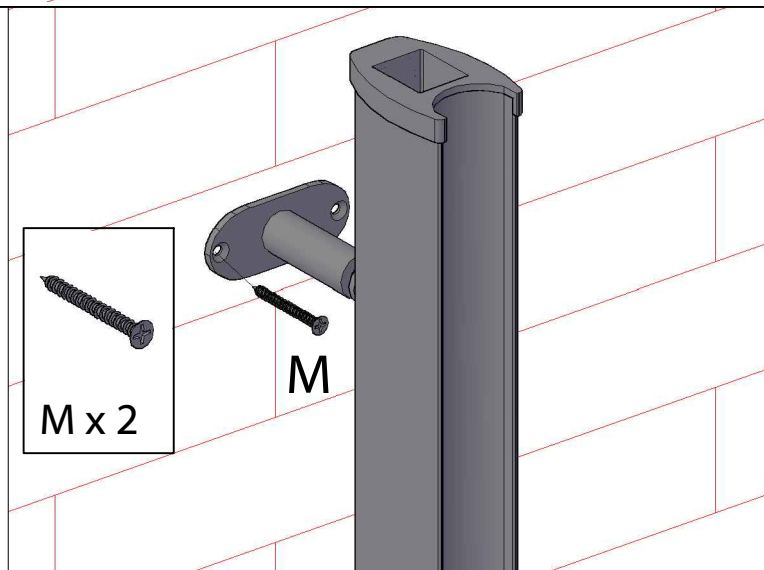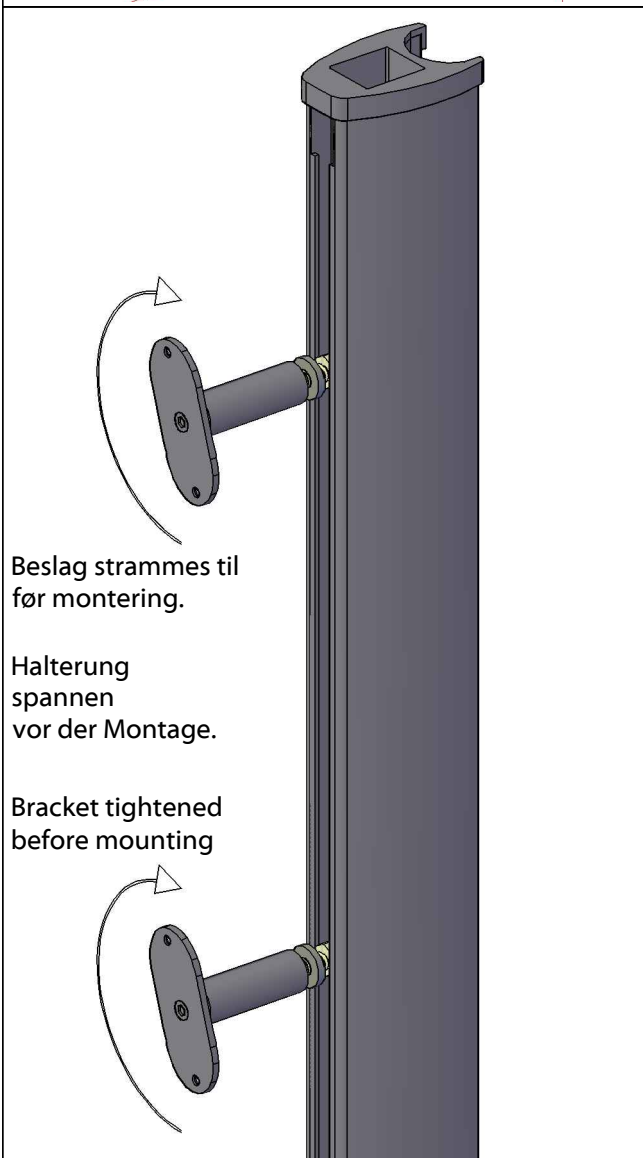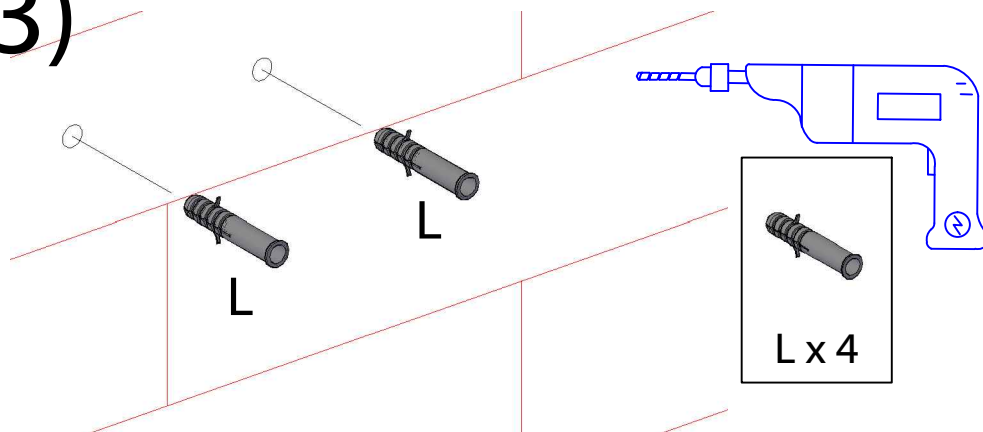

Se www.plus.dk for yderligere information og vedligehold af materialer

www.plus.dk for further information and maintenance of materials

Weitere Informationen und Pflegehinweise finden Sie unter www.plus.dk