


General Instruction

General
Instruction

Villeroy & Boch

SupraFix
3.0

Villeroy & Boch

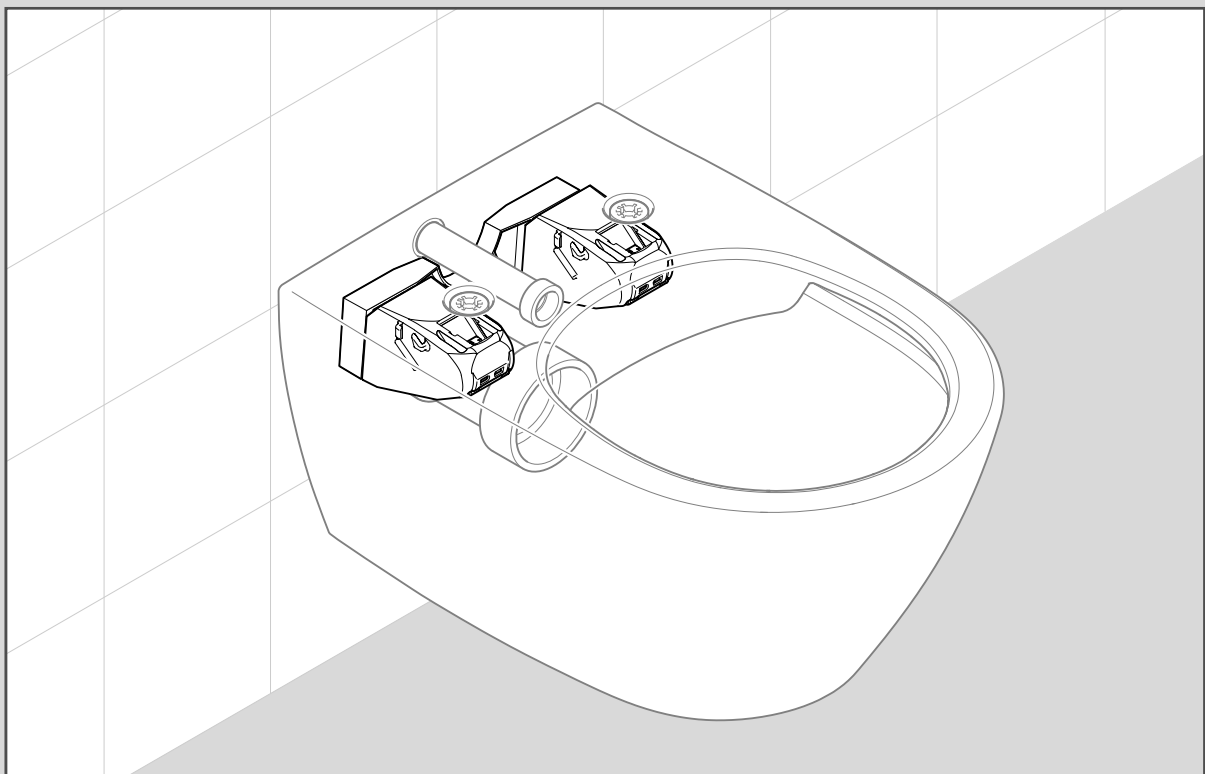

DE Montageanleitung
WC, Suprafix 3.0 Befestigung

EN Installation Instructions
WC, Suprafix 3.0 fixation

FR Instructions de montage
WC, fixation Suprafix 3.0

IT Istruzioni di montaggio
WC, fissaggio Suprafix 3.0


ES Instrucciones de montaje
Inodoro, fijación Suprafix 3.0


NL Montage-instructie
WC, bevestiging Suprafix 3.0




ZH 装配说明
马桶, Suprafix 3.0 快速安装

RU Инструкция по монтажу
Унитаз, крепление Suprafix 3.0



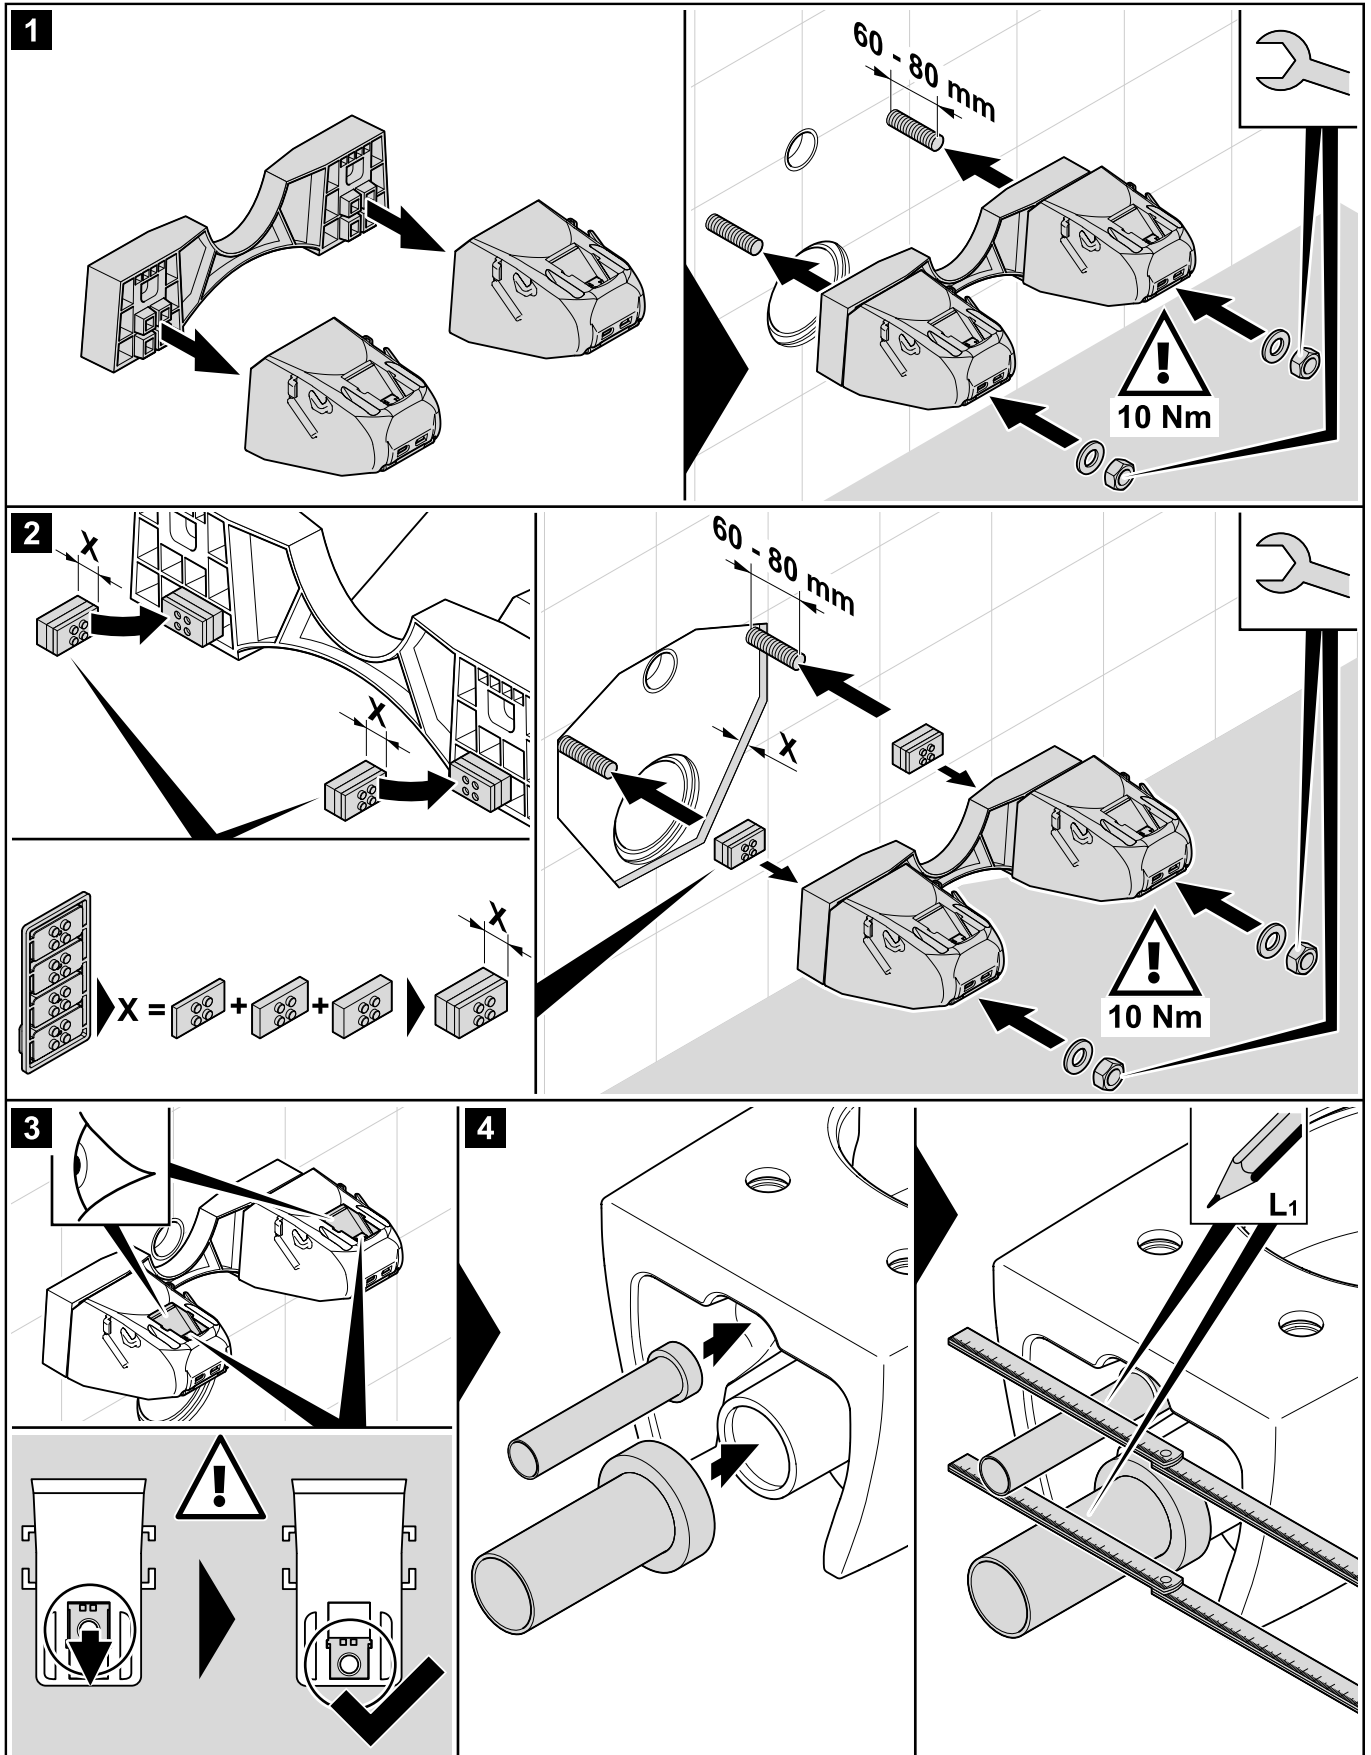

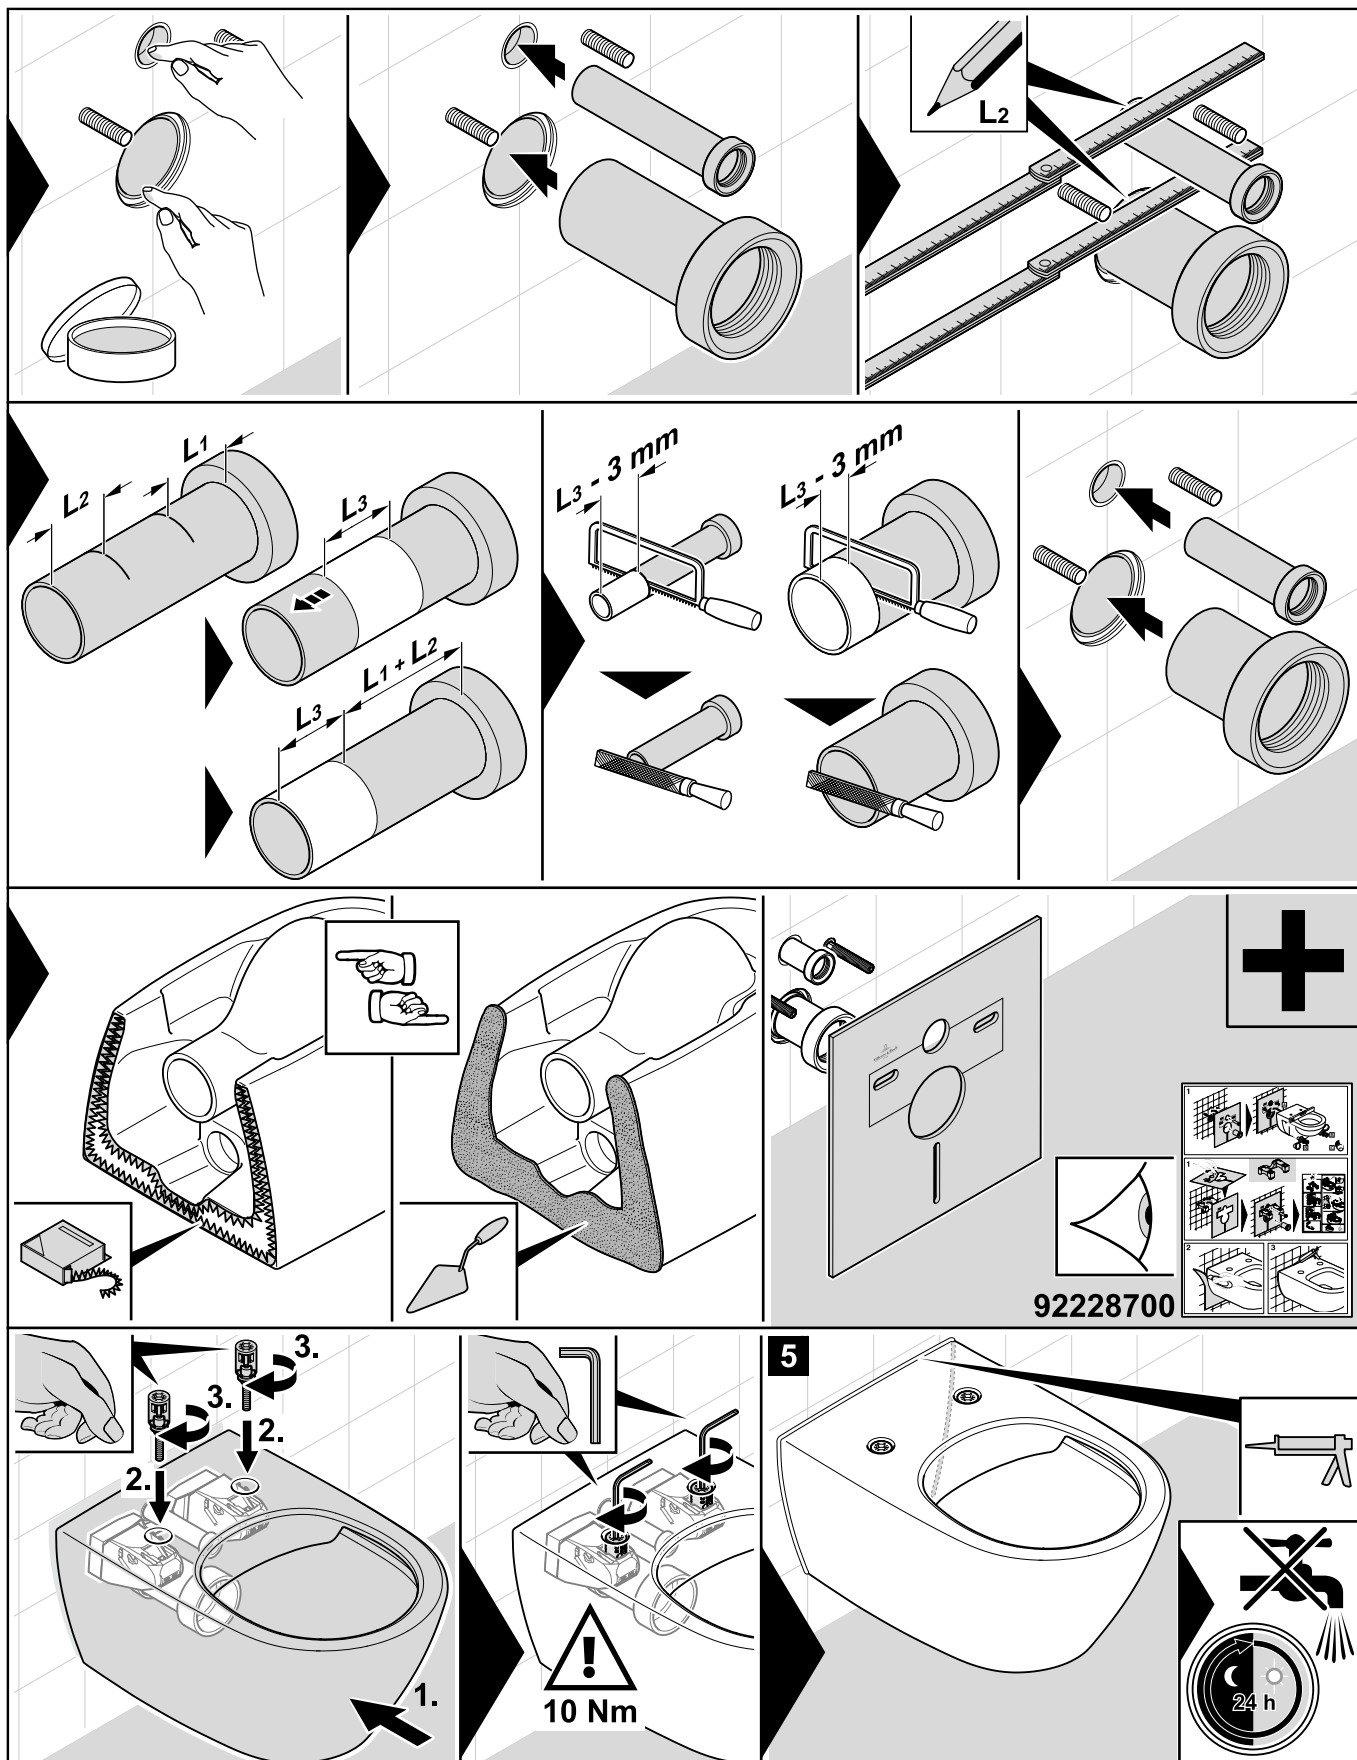

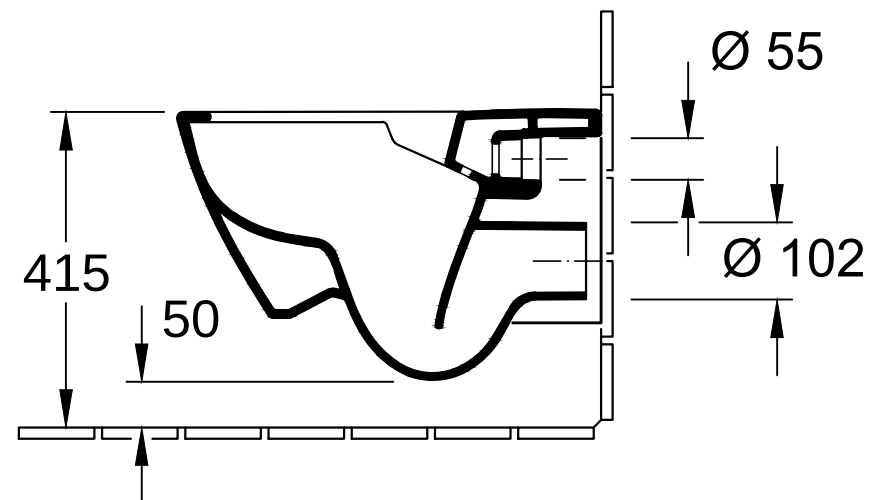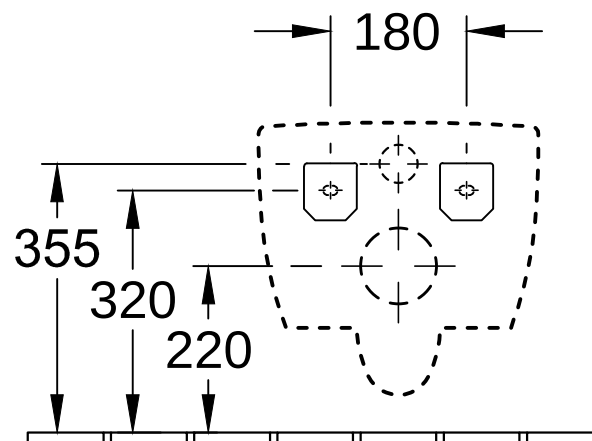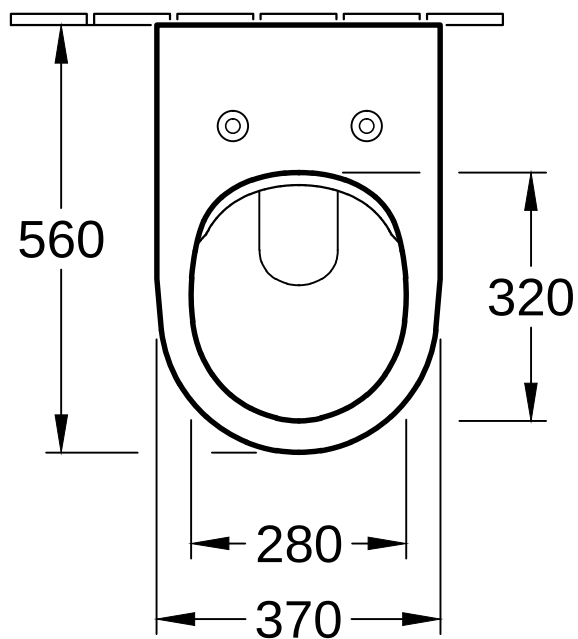

Designation				Villeroy&Boch
SUBWAY 2.0 DirectFlush				
5614 R0 / R6 - Wall-mtd. washdown WC				This drawing may not be copied or passed on to third parties or competitive companies without our permission. Villeroy & Boch accepts no liability whatsoever for these data and technical drawings. Other parties use them at their own risk. The dimensions indicated are not binding. Villeroy & Boch reserves the right to make product changes.
Altered:	28.11.2013	Approved by:	AMS	
		Date:	21.02.2013	
		Signed:	MHK	
		Date:	01.2013	